


ALPConnect® Bluetooth module for AL Priority®


This optional module enables a wireless smartphone connection to your AL Priority

ALPConnect BT Module comes with two sockets:

1. Control Box - connect with a supplied wire to C socket on the Control Box
2. Control SET socket for your wired Control SET

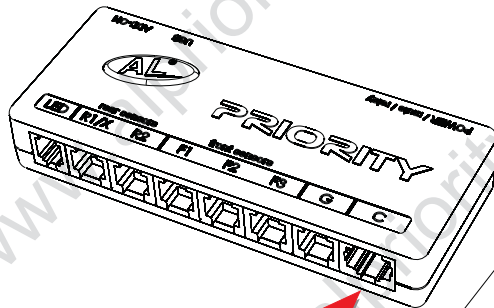

C to C connection cable
Use this cable to connect the
BlueTooth module with the C
socket of your AL Priority
Control Box.

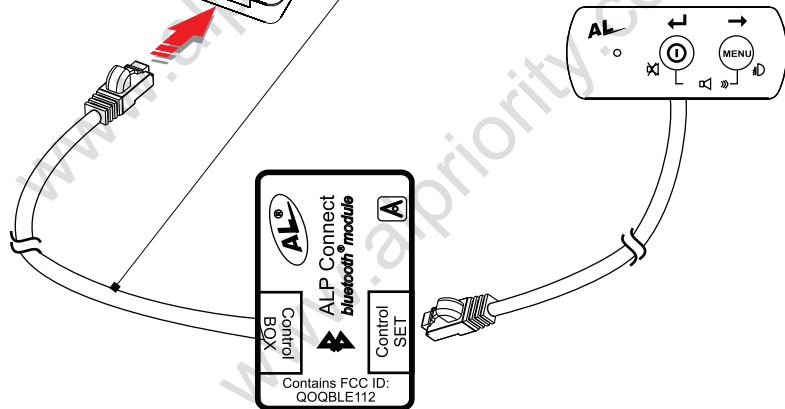

Contains FCC ID:
QOGBLE112

Read instructions in your AL Priority Manual when installing remaining parts of the AL Priority system.

IMPORTANT NOTICE: If you intend to mount the whole system including the AL Priority Control Box with the BlueTooth module inside the engine compartment, you must use a waterproof enclosure to protect the AL Priority Control Box and the BlueTooth Module from moisture. If these parts are exposed to water it is likely to cause damage or malfunction that is not covered by warranty.

- 1.** Once your AL Priority system with the BT Module is installed, search iTunes or Google App Store for ALPConnect.
- 2.** Download it and install it to your iPhone (4s or later) or Android mobile device. A full list of compatible devices can be found online under FAQ.
- 3.** Once you start the ALPConnect you must SCAN for BlueTooth devices and connect to your AL Priority with the Serial Number and PIN (labeled on the Blueooth Module).

Detailed instructions about the ALPConnect application can be downloaded from within the app (press HELP button on the ALPConnect Setup screen).

All intellectual rights in this product, including software are proprietary.

Radikal d.o.o. Croatia © December 2015

Visit us at www.alpriority.com

Contact us at info@alpriority.com